




# Starting & Stopping the Engine

---


## How to Stop the Engine

### Normal Engine Stop (TRX450ER)


To stop the engine, make sure the transmission is in neutral by checking that the neutral indicator light is on, then turn the ignition switch OFF (  ).

If your ATV is stopped with the engine stop switch OFF (  ) and the ignition switch ON (  ), the battery will discharge.


### (TRX450R)

To stop the engine, make sure the transmission is in neutral, and turn the ignition switch OFF (  ).

### (TRX450ER & TRX450R)

The engine stop switch should normally remain in the RUN (  ) position even when the engine is OFF.

### Emergency Engine Stop

To stop the engine in an emergency, use the engine stop switch. To operate, slide the switch to the OFF (  ) position.