

# Coolant

## Radiator Core


Refer to *Safety Precautions* on page 77 .

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your Honda dealer if the air flow is restricted over more than 20% of the radiator surface.

Clean the radiator core after riding the ATV in mud.

*To clean the radiator core and radiator grill:*

1. Remove the steering cover (page 106).
2. Remove the shroud (1) by removing the bolts A (2) and B (3), the clip (4), and the grommets (5) from the prongs.
3. The right and left shrouds can be removed in the same manner.

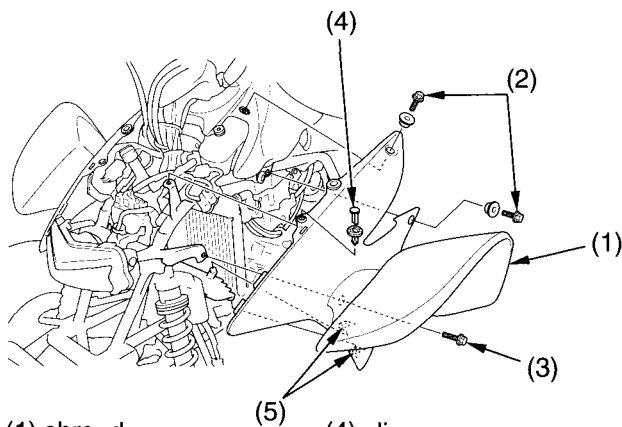

- (1) shroud
- (2) bolts A
- (3) bolt B

- (4) clip
- (5) grommets