


# Air Cleaner

## Cleaning

### UNDER SEAT

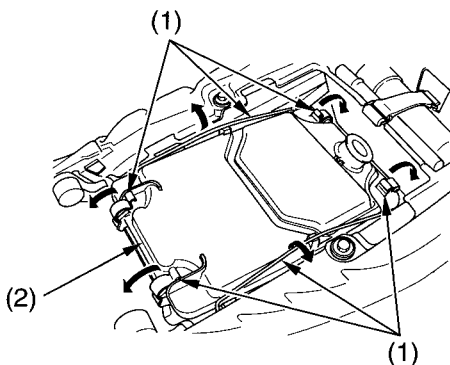

(1) retainer clips

(2) air cleaner housing cover

1. Remove the seat (page 88 ).
2. Unlatch the retainer clips ( 1 ).
3. Remove the air cleaner housing cover ( 2 ).

(cont'd)