

# Air Cleaner

---

12. Install the air cleaner on the air cleaner body.
13. Apply a thin coat of grease to the sealing surface of the air cleaner assembly.
14. Install the clamp.
15. Insert the air cleaner assembly into the air cleaner housing.
16. Fasten the screw B.
17. Install the stay and fasten the screw A.
18. Install the air cleaner housing cover and latch the retainer clips.
19. Install the seat.