



Indicators & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

- Operation Component Locations10
- Indicators.....13
 - High Coolant Temperature Indicator13
 - Neutral Indicator (TRX450ER only).....14
- Controls & Features15
 - Fuel Valve15
 - Choke Knob16
 - Hot Start Lever (TRX450R only)17
 - Ignition Switch18
 - Start Button (TRX450ER only).....19
 - Kickstarter (TRX450R only)20
 - Engine Stop Switch.....21
 - Headlight Switch.....22
 - Headlight Dimmer Switch.....22
 - Throttle Lever23
 - Clutch Lever/Parking Brake Lever23
 - Front Brake Lever24
 - Rear Brake Pedal.....24
 - Parking Brake.....25
 - Flag Pole Bracket26

