




## Starting & Stopping the Engine

(TRX450R)

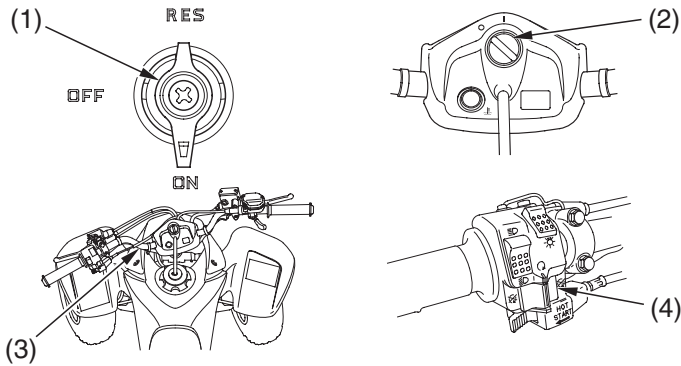

(1) fuel valve  
(2) ignition switch

(3) handlebar  
(4) engine stop switch

1. Before starting, select a level surface and lock the parking brake (page 25 ).
2. Turn the fuel valve ( 1 ) and ignition switch ( 2 ) to ON ( I ).
3. Turn the handlebar ( 3 ) all the way to left.

Confirm the following:

- The transmission is in neutral (the tyres roll freely).
- The engine stop switch ( 4 ) is set to RUN ( O ).

The high coolant temperature indicator should go off a few seconds after the engine starts.

