



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT.			Refer to page	
			REGULAR MAINT. INTERVAL				
			km	1000	2000		
			mi	600	1200		
		HOOURS	20	100	200		
* FUEL LINE					I	—	
* THROTTLE OPERATION					I	114	
AIR CLEANER		NOTE 1			C	C	110
SPARK PLUG					I		122
* VALVE CLEARANCE/ DECOMPRESSOR SYSTEM				I	I	I	125
ENGINE OIL			INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			92	
ENGINE OIL FILTER			R	R	R		96
* TRANSMISSION OIL				R	R		99
* ENGINE IDLE SPEED			I	I	I		120
RADIATOR COOLANT		NOTE 3		I	I		104
* COOLING SYSTEM		NOTE 2		I	I		105

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

