



## If Your Engine Quits or Won't Start

SYMPTOM: <b>Engine doesn't operate. (TRX450R only)</b>	
POSSIBLE CAUSE	WHAT TO DO
ignition switch OFF	Turn the ignition switch ON.
engine stop switch OFF	Turn the engine stop switch to RUN.
transmission not in neutral	Shift into neutral.
out of fuel	Fill the fuel tank.
flooded engine	See Starting Procedure (page 54 ).
loose or unconnected spark plug cap	Install the spark plug cap securely. If the engine still won't start, see your Honda dealer.
not enough throttle freeplay	Check the throttle freeplay (page114).

