

	FREQUENCY	ITEMS	Whichever comes first ↷	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				km	1000	2000		
		NOTE	HOURS	20	100	200		
NON EMISSION RELATED ITEMS		DRIVE SHAFT BOOTS					—	
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R: EVERY 2YEARS)		111 – 113	
	*	BRAKE FLUID	(NOTE3)				128	
	*	BRAKE SHOE WEAR	(NOTE1)				133	
		BRAKE SYSTEM					125 – 134	
	*	REVERSE LOCK SYSTEM					117	
		SKID PLATES, ENGINE GUARD					141	
	*	CLUTCH SYSTEM					116	
	*	SUSPENSION					—	
	*	SPARK ARRESTER				C	C	142
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						135 – 139
	**	STEERING SHAFT HOLDER BEARINGS						—
	**	STEERING SYSTEM						—

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.