

# Spark Plug

---

8. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
9. Tighten the spark plug:
  - about 1/8-1/4 turn after it seats (if the old plug is good).
  - about 1/2 turn after it seats (if installing a new plug).

## NOTICE

*Improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.*

10. Reinstall the spark plug caps. Take care to avoid pinching any cables or wires.
11. Install the remaining parts in the reverse order of removal.