


# Battery

The battery is located in a compartment under the seat.

## UNDER SEAT

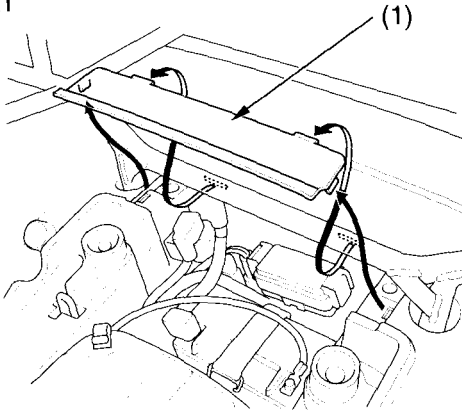

(1) rear fender lid

1. Make sure the ignition switch is OFF ( O ).
2. Remove the seat (page I 10).
3. Remove the rear fender lid ( 1 ).