## **Maintenance Schedule**

		WHICHEVER		INITIAL	REGULAR		
FREQUENCY		COMES		MAINT.	MAINT. INTERVAL		
		FIRST	km	150	1000	2000	Refer to
ITEMS		⇔	mi	100	600	1200	page
		NOTE	HOURS	20	100	200	
	DRIVE SHAFT BOOTS	•			1	1	169
	REAR FINAL GEAR				(R:EVERY	1	125
	CASE OIL AND				2 YEARS)		127
	DIFFERENTIAL OIL						
*	BRAKE FLUID	NOTE 3			I		150
*	BRAKE SHOES WEAR	NOTE 1					158
*	BRAKE PADS WEAR	(NOTE 1,2)					153
*	BRAKE LIGHT SWITCH				1	1	159
	BRAKE SYSTEM			ı		1	150
	SKID PLATES, ENGINE				1	_ · I	168
	GUARD						
*	SUSPENSION				1	I	
*	SPARK ARRESTER				С	С	148
*	NUTS, BOLTS,			1			_
1	FASTENERS						
**	WHEELS/TYRES						161
**	STEERING SHAFT					ı	-
[	HOLDER BEARINGS						
**	STEERING SYSTEM_			<u> </u>			

<sup>\*</sup> Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

<sup>\*\*</sup> In the interest of safety, we recommend these items be serviced only by your Honda dealer.