

# Indicators & Displays

## Oil Change Indicator


The oil change indicator (1) appears in the display when the mileage or operating hours on your ATV approaches the oil change interval specified on the maintenance schedule.

Reset the indicator after each oil change.

To reset the indicator, press and hold both the odometer/tripmeter select button (2) and RESET (digital clock/hourmeter select) button (3) for more than 2 seconds. The indicator will disappear.


If the oil is changed before the oil change indicator appears, be sure to reset the oil change indicator after changing the oil. The indicator will appear for 2 seconds, then disappear. This means the indicator is reset.

TRX500FA

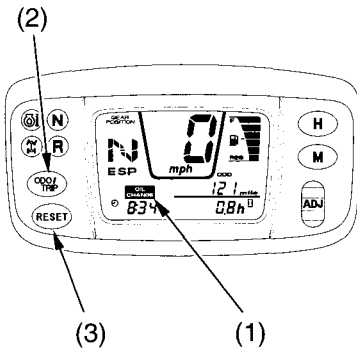

- (1) oil change indicator
- (2) odometer/tripmeter select button

TRX500FGA

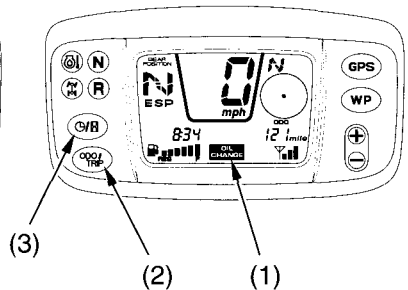

- (3) RESET button  
digital clock/hourmeter  
select button (TRX500FGA)