
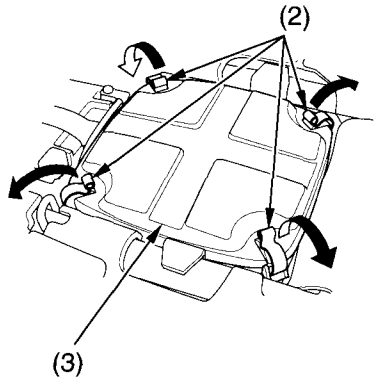


Air Cleaner

Cleaning

1. Remove the seat by pulling the seat lock lever (1) up (page 142).

UNDER SEAT

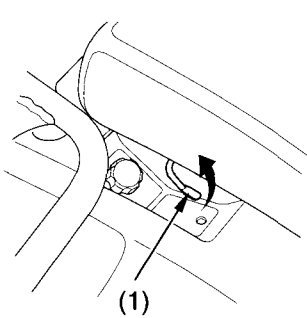

(1) seat lock lever
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the retainer clips (2).
3. Remove the air cleaner housing cover (3).