


Suspension (Canada only)

Suspension Spring Pre-Load

Refer to *Safety Precautions* on page 131.

FRONT

REAR

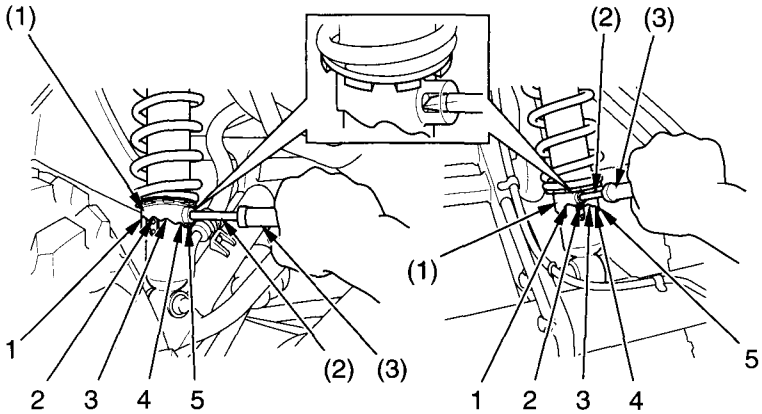

(1) spring pre-load adjuster
(2) standard/Phillips screwdriver

(3) screwdriver handle

The spring pre-load adjuster (1) has 5 positions for different load or riding conditions.

Use the standard/Phillips screwdriver (2) and screwdriver handle (3) to adjust the shock spring pre-load.