



## Indicators & Displays

11	Digital clock/ hourmeter select button (TRX500FGA/FPA)	Selects display of the hourmeter or digital clock (pages 28, 30). This button also used to reset the oil change indicator (page 25 ).
12	GPS button (TRX500FGA)	This button is used to select the GPS navigation mode.
13	WP button (TRX500FGA)	This button is used to input a waypoint or to erase waypoint data.
14	PS (Electric Power Steering) indicator (TRX500FPA)	Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 52 . <i>Lamp Check</i> .
15	GPS/WP button (TRX500FPA)	This button is used to select the GPS navigation mode and input a waypoint or to erase waypoint data.
16	Plus button (TRX500FGA/FPA)	Advances the latitude and longitude when in the GPS mode. This button also used to set the digital clock (page 30 ).
17	Minus button (TRX500FGA/FPA)	Advances the latitude and longitude when in the GPS mode. This button also used to set the digital clock (page 30 ).

