



Engine Oil & Filter

10. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 238).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

11. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
12. Install the drain bolts and tighten to the specified torque:
 - Oil tank drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
 - Crankcase drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
13. Install the engine guard and the mounting bolts. Tighten the mounting bolts.
14. Fill the oil tank with the recommended grade oil approximately:
4.6 US qt (4.4 ℓ)
15. Reinstall the engine oil filler cap.
16. Check the oil level (page 166).
17. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

