




Suspension

Suspension Spring Pre-Load

Refer to *Safety Precautions* on page 147.

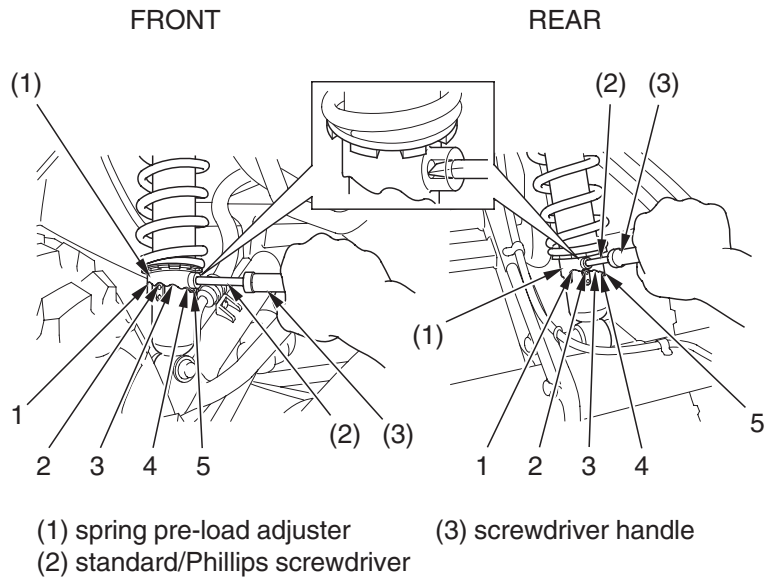

The spring pre-load adjuster (1) has 5 positions for different load or riding conditions.

Use the standard/Phillips screwdriver (2) and screwdriver handle (3) to adjust the shock spring pre-load.

