

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to **Break-in Guidelines** (page 210).

For information about carburetor adjustment for riding at high altitude, see page 211.

Safe Riding Precautions	59
Off-Road Use Only	59
Keep Hands and Feet on Controls.....	60
Control Speed.....	61
Use Care on Unfamiliar or Rough Terrain.....	62
Do Not Perform Stunts.....	63
Starting & Stopping the Engine	64
Preparation	64
Starting Procedure	65
Flooded Engine	67
Stalled Engine	67
How to Stop the Engine	68
Using the Recoil Starter	69
Shifting Gears	70
Riding in Reverse.....	73

(cont'd)