

Spark Plug

Spark Plug Recommendation

standard spark plug	BKR5E-11 (NGK) or K16PR-U11 (DENSO)
---------------------	--

Use only the recommended type of spark plug in the recommended heat range.

NOTICE


Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 95.

1. Remove the seat (page106).
2. Loosen the screw (1) and remove the clip (2).
3. Remove the resonance chamber (3).
4. Unhook the rubber cover (4).
5. Clean any dirt from around the spark plug base.
6. Disconnect the spark plug cap (5). Take care to avoid damaging the spark plug wire when disconnecting the cap.
7. Using the spark plug wrench provided in the tool kit, remove the spark plug.

- (1) screw
(2) clip
(3) resonance chamber
(4) rubber cover
(5) spark plug cap

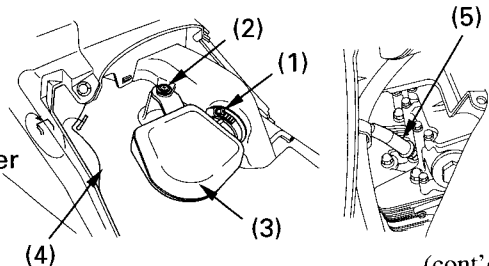

(cont'd)