




Seat Removal

Refer to *Safety Precautions* on page 99.

The seat must be removed for the air cleaner, spark plug, battery and fuse maintenance, and to access the owner's manual, tool kit and gear change tool.

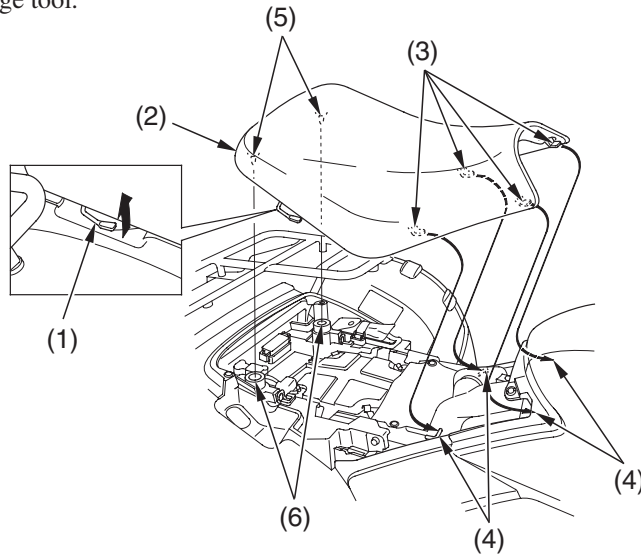

- | | |
|---------------------|--------------|
| (1) seat lock lever | (4) hooks |
| (2) seat | (5) studs |
| (3) front prongs | (6) grommets |

Removal

1. Pull the seat lock lever (1) at the right side of the seat.
2. Slide the seat (2) back and lift it.

Installation

1. Insert the front prongs (3) into the hooks (4) on the frame and press the studs (5) into the grommets (6).
2. Press down on the seat until locks.

110 Servicing Your Honda