



Controls & Features

PS (Electric Power Steering) (TRX500FPM only)

This ATV is equipped with an electronically controlled, electric-power-assisted steering system.

While the engine is running, the PS (Electric Power Steering) system provides power from the electric motor, which helps you to turn the ATV's handlebar more easily.

The PS system on this ATV utilizes an overheat protection feature to prevent damage to system components. In certain extended, repetitive high-load situations, the system will reduce or even disable power steering assist. The steering will perform as a normal non-PS system during this brief period. After cooling down, it will then return to normal PS operation.

The PS indicator should light when the ignition switch is turned ON (I) and remain on until the engine is started.

The PS indicator also lights when there is any abnormality in the PS system. If this occurs, the electric power assist for turning will not be available, but the manual steering system will perform as usual.

If the PS indicator lights at any time while riding, reduce speed and take your ATV to a Honda dealer as soon as possible. Continuing to ride with a PS system problem can cause system damage.

Do not modify your Electric Power Steering system. In case of a malfunction, take your ATV to a Honda dealer.

44 Instruments & Controls

