

Air Pressure

Refer to *Safety Precautions* on page 97 .

Properly inflated tyres provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tyres wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Overinflated tyres make your ATV ride more harshly, are more prone to damage from surface hazards, and wear unevenly.

Make sure the valve stem caps are secure. If necessary, install a new cap.

Tyres

A manually operated tyre pump should be used rather than the high pressure system found in service stations. This will minimize the possibility of tyre damage from overinflation. If you use a high pressure system at a service station, add air in small amounts and check the pressure increase frequently to prevent possible tyre damage from overinflation.

⚠ WARNING

Operating this ATV with improper tyres, or with uneven tyre pressure may cause loss of control, and you could be seriously injured or killed.

- Always use the size and type tyres specified in this owner's manual for this vehicle.
- Always maintain proper tyre pressure as described in this owner's manual.

Inspection

Refer to *Safety Precautions* on page 97 .

Whenever you check the tyre pressures, you should also look for:

- Bumps or bulges in the side of the tyre or the tread. Replace any tyre that has a bump or bulge.
- Cuts, slits, or cracks in the tyres. Replace the tyre if you can see fabric or cord.
- Nails or other foreign objects embedded in the side of the tyre or tread.
- Excessive tread wear.