

## If the Battery is Dead

Your ATV will operate even if the battery is dead, as long as the engine is running. If the engine is not running, it may be started using the recoil starter. See your Honda dealer to have the battery recharged or replaced.


1. Shift the gearshift lever in Neutral (N) position.
2. Apply the parking brake.
3. Turn the ignition switch to the "ON" ( I ) position.
4. Use the recoil starter (page 69 ) to start the engine.

Taking Care of the Unexpected 193

## If You Have a Flat Tyre

### Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 97 .

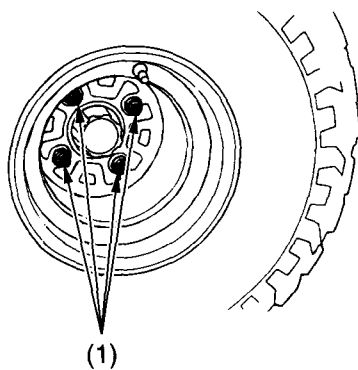

(1) wheel nuts

#### Removal

1. Park your ATV on a firm, level surface.
2. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
3. Remove the wheel nuts (1) with a 17 mm socket wrench.
4. Remove the wheel.

Taking Care of the Unexpected 195