




## Shifting Gears

### **AUTO Mode**

When the drive mode is at AUTO, shifting the lever to “D” (drive) provides a 3-speed automatic transmission.

1. While pulling up the shift lever (1), shift to “D.”
2. Pull down the shift lever and confirm that the lever is locked and the gear position indicator (3) is showing “D.”

Shifting to “N” (neutral) or “R” (reverse) is in the same manner as above. For reverse, refer to the *Riding In Reverse* (page 77).

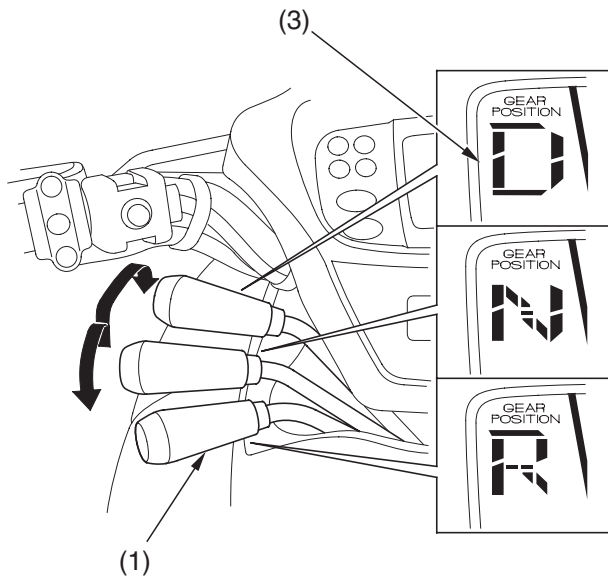

- (1) shift lever  
(3) gear position indicator

