



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	km	150	1000	2000	
			mi	100	600	1200	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		136
AIR CLEANER		NOTE 1			C	C	131
AIR CLEANER HOUSING DRAIN TUBE		NOTE 2			I	I	135
SPARK PLUG						I	138
* VALVE CLEARANCE				I	I	I	141
ENGINE OIL				INITIAL= 150 km (100 mi), 20 operating hours or 1 month: R REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months: R			114
ENGINE OIL FILTER				R	R	R	119
RADIATOR COOLANT		NOTE 3			I	I	126
* COOLING SYSTEM		NOTE 2			I	I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

102 Servicing Your Honda

