


GPS Mode

11. To select the tenths of a second (11):
 - To increase, tap the plus button.
 - To decrease, tap the minus button.
12. To enter the displayed tenths of a second in the system, tap (do not hold) the GPS/WP button until LON appears above the WP mark. The compass direction indicator will flash Eastern Longitude (12) or Western Longitude (13).
(To switch to the other hemisphere, press either the plus or minus button.)

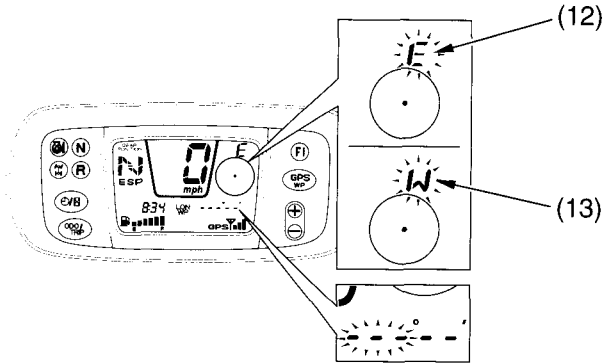

- (12) Eastern Longitude
- (13) Western Longitude

13. To enter the longitude coordinates, follow the same procedure used in steps 6 – 11 .