

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 240).

Safe Riding Precautions	91
Off-Road Use Only	91
Keep Hands and Feet on Controls	92
Control Speed	93
Use Care on Unfamiliar or Rough Terrain	94
Do Not Perform Stunts	95
Starting & Stopping the Engine	96
Preparation	96
Starting Procedure	97
Flooded Engine	98
Bank Angle Sensor Ignition Cut-off System	98
Stalled Engine	99
How to Stop the Engine	100
Using the Recoil Starter	101
Shifting Gears	102
Riding in Reverse	108

(cont'd)