

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		166
AIR CLEANER	NOTE 1				C	C	161
AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	165
SPARK PLUG						I	168
* VALVE CLEARANCE				I	I	I	171
ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			144
ENGINE OIL FILTER				R	R	R	149
RADIATOR COOLANT	NOTE 3				I	I	156
* COOLING SYSTEM	NOTE 2				I	I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 248).