

Indicators

1	PGM-FI indicator	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON (I) and engine stop switch is on RUN (O). If the indicator comes on at any other time, reduce speed and take your vehicle to a Honda dealer as soon as possible.</p> <p><i>Lamp Check.</i></p>
2	High coolant temperature indicator	<p>Lights when coolant temperature is high enough to adversely affect the service life of the engine. Should also light for a few seconds and then go off when the ignition switch is turned ON (I) and engine stop switch is on RUN (O). If the high coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool.</p> <p>See page 184 . <i>Lamp Check.</i></p>
3	Neutral indicator	<p>Lights when the transmission is in neutral.</p>
4	Reverse indicator	<p>Lights when the transmission is in reverse. Should also light for a few seconds and then go off when the ignition switch is turned ON (I) and engine stop switch is on RUN (O). <i>Lamp Check.</i></p>