

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			km	150	1000	2000		
			mi	100	600	1200		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I		—
*	THROTTLE OPERATION					I		117
	AIR CLEANER	NOTE 1				C	C	112
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	116
	SPARK PLUG					I	I	123
*	VALVE CLEARANCE				I	I	I	126
	ENGINE OIL				INITIAL= 150 km (100 mi), 20 operating hours or 1 month : R			96
	ENGINE OIL FILTER				REGULAR= Every 1,000 km (600 mi), 100 operating hours or 12 months : R			102
*	ENGINE OIL STRAINER SCREEN IN OIL TANK						C	—
	RADIATOR COOLANT	NOTE 3				I	I	106
*	COOLING SYSTEM	NOTE 2				I	I	110

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.