

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		⇒	km	150	1000		2000
			mi	100	600		1200
			MONTH	1	6		12
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS					146	
	DRIVE CHAIN	NOTE 1,2	I,L	(I, LEVERY 500 km (300 mi) or 50 operating hours)		147	
	DRIVE CHAIN SLIDER					149	
*	BRAKE FLUID	NOTE 3				129	
*	BRAKE PADS WEAR	NOTE 1,2				133	
*	BRAKELIGHT SWITCH					135	
	BRAKE SYSTEM					129	
	GUARDS					144	
	SCRAPER	NOTE 2				145	
*	CLUTCH SYSTEM					119	
*	SUSPENSION					—	
*	SPARK ARRESTER			C	C	127	
*	NUTS, BOLTS, FASTENERS					—	
**	WHEELS/TYRES					—	
**	TIE-ROD AND JOINT BOOTS					—	
**	STEERING SHAFT HOLDER BEARINGS					—	
**	STEERING SYSTEM					—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your dealer.