


PARTS FUNCTION

Engine Stop Switch


The three position engine stop switch (1) is on the left handlebar. When the switch is in the RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate. This switch can be used as a safety or emergency switch.

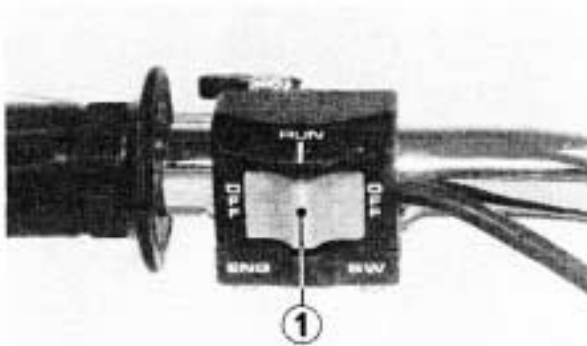

(1) Engine stop switch

Throttle Lever

The throttle lever (1) is next to the right handlebar grip and is operated by the rider's thumb. Pressing the lever forward opens the throttle. When the lever is released, spring tension closes the throttle automatically.

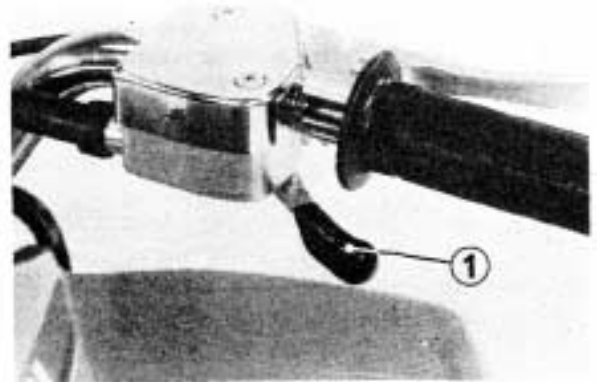

(1) Throttle lever