

OPERATION

PRE-RIDE INSPECTION

** Failure to conduct the listed maintenance checks and adjustments may lead to equipment failure that could cause an accident.*

Inspect your FOUR TRAX every day before you ride it. The items listed here will only take a few minutes to check and in the long run can save time, expense, and possibly your life.

1. Engine oil level – if required, add engine oil (page 24). Check for leaks.
2. Fuel level – fill the fuel tank when necessary (page 22). Check for leaks.
3. Brakes – check operation. If necessary, adjust free play (pages 54–55).
4. Tires – check condition and pressure (pages 2, 26–27).
5. Drive chain – check condition and slack (page 56). If necessary, adjust and lubricate.
6. Throttle – check for smooth opening and closing in all steering positions (page 57).

7. Engine stop switch – check for proper function (page 15).
8. Nuts, Bolts, Fasteners – check the wheels to see that the axle nuts are tightened and secured by cotter pins. Check the security of all other nuts, bolts and fasteners.
9. Steering – check that the wheels turn properly as you steer the handlebars.

Correct any discrepancy before you ride. Contact your authorized Honda dealer for assistance if you cannot correct the problem.