


## STARTING THE ENGINE

### ⚠ WARNING

- \* *Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas.*
- \* *Do not try to start the engine with the transmission in gear. You may injure yourself or damage the vehicle.*
- \* *Be sure to release the steering lock before attempting to start the engine.*

### NOTE:


- \* The engine will not start unless the transmission is in NEUTRAL.

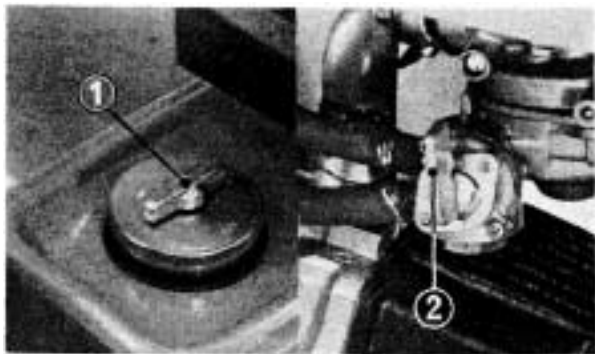

(1) Fuel cap lever      (2) Fuel valve

### Starting Procedure

1. Select a level surface and lock the parking brake before starting the engine.
2. Turn the fuel cap lever (1) and fuel valve (2) to ON.
3. Move the engine stop switch (3) to RUN.
4. Make sure that the transmission is in neutral by depressing the shift lever and checking that the neutral indicator (4) is at N.

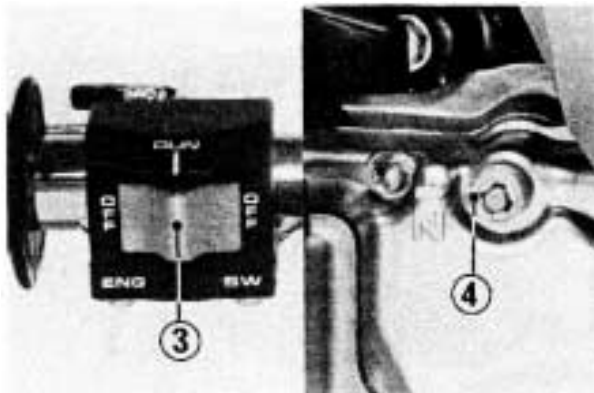

(3) Engine stop switch      (4) Neutral indicator