


5. Remove the standard No. 62 main jet (1) and install the high altitude main jet in accordance with the chart. Reinstall the float chamber.
6. Install the carburetor. Assure that the drain screw is turned fully clockwise. Turn the fuel valve ON.
7. Check to see if the throttle returns without hesitation and the throttle valve comes down to the lowest position without fail.
8. Make sure that the fuel tube and overflow tube are correctly routed as they were originally installed.
9. Start the engine. Adjust the idle speed and pilot screw (2) (page 46).

**NOTE:**

- \* Adjust the idle speed and pilot screw at high altitude to ensure proper high altitude operation.

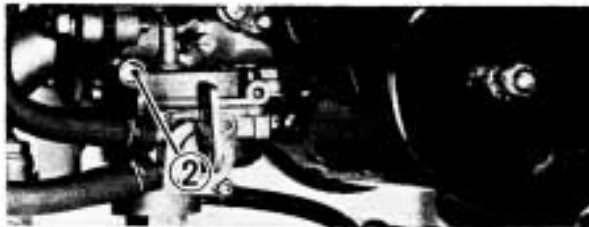

(2) Pilot screw

**Removal:**

1. Follow installation steps 1—4.
2. Reinstall the original No. 62 main jet.
3. Reinstall the carburetor. Adjust the idle speed and pilot screw (2).

**NOTE:**

- \* Adjust the idle speed at low altitude to ensure proper low altitude operation.