

## Fuel Valve

The fuel valve (Fig. 2-18) is on the left side of the fuel tank, and it has three positions:

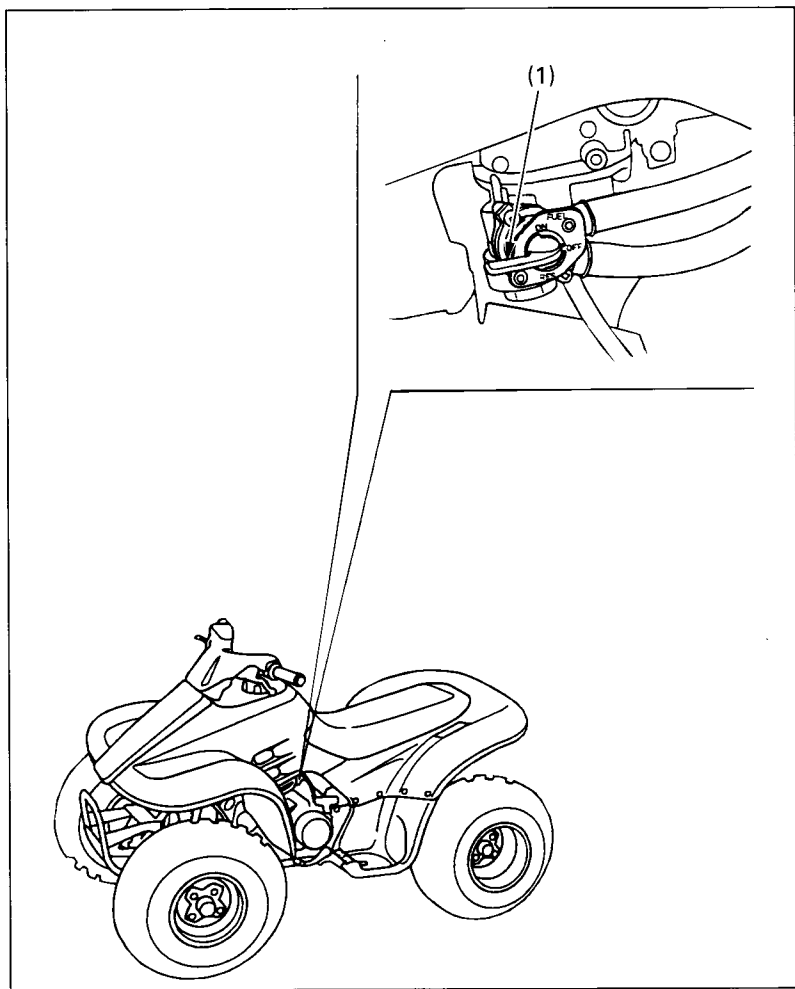


Fig. 2-18

(1) Fuel valve