

High Air Temperature

35 °C (95 °F) or above

1. Do not use the choke.
2. Start the engine (follow steps 2–4 under Normal Air Temperature).

Low Air Temperature

10 °C (50 °F) or below

1. Follow steps 1– 2 under “Normal Air Temperature.”
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever is fully OFF.