

# Operating Controls


## Engine Stop Switch



The engine stop switch (1) is used to stop the engine in an emergency. To operate, slide the switch to either OFF (⊗) position. The switch must be in the RUN (⊖) position to start the engine, and it should normally remain in the RUN (⊖) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON ( | ) and the engine stop switch OFF (⊗), the battery will discharge. Turn the ignition switch OFF (○) to prevent battery discharge.

### LEFT HANDLEBAR

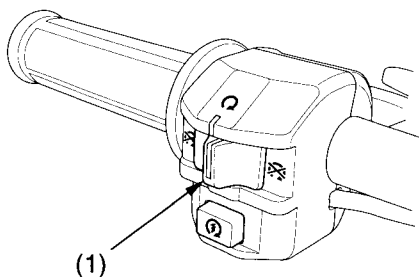

(1) engine stop switch

⊗ OFF  
⊖ RUN