

# Engine Idle Speed and Air-Fuel Mixture

---

## Air-Fuel Mixture Adjustment

1. Turn the air screw (2) clockwise until you hear the engine miss or decrease in speed.
2. Then turn the screw counterclockwise until the engine misses or decreases in speed again.
3. Centre the air screw exactly between the two extreme positions.  
Usually, the correct setting (between extremes of rich and lean) will be found at 1-7/8 turns open from a fully closed position.
4. If idle speed changes after adjusting the fuel mixture, readjust the throttle stop screw.