

# Safe Riding Precautions

---

## **Full Throttle Operation**

1. Remove the air intake restrictor (page 48).
2. Loosen the lock nut (1) and remove the throttle limiter screw (2).
3. Install the standard screw supplied with your ATV (in the owner's manual bag) to prevent moisture or debris (dirt, sand, pebbles, sticks, etc.) from entering the throttle housing.  
Moisture and debris may interfere with proper throttle operation.

Store the throttle limiter screw and air intake restrictor in the owner's manual bag so you can install them whenever you want to reduce the top speed.