



Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒ NOTE	INITIAL MAINT. INTERVAL			Refer to page
			mi	600	1200	
			km	1000	2000	
			HOURS	20	200	
* FUEL LINE				I	—	
* THROTTLE OPERATION				I	109	
AIR CLEANER	NOTE 1			C	C	105
SPARK PLUG				I	I	113
* VALVE CLEARANCE			I	I	I	116
ENGINE OIL			INITIAL=100 mi (150 km), 20 operating hours or 1 month: R REGULAR=Every 600 mi (1000 km), 100 operating hours or 12 months: R			99
** ENGINE OIL STRAINER SCREEN					C	—
** ENGINE OIL CENTRIFUGAL FILTER					C	—
* ENGINE IDLE SPEED			I	I	I	112
* SECONDARY AIR SUPPLY SYSTEM					I	—

* Should be serviced by your Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

