

ITEM	FREQUENCY	WHICH EVER COMES FIRST ↓ →	ODOMETER READING [NOTE (3)]							PAGE
			1,000 km (600 mi)	6,000 km (3,750 mi)	12,000 km (7,500 mi)	18,000 km (11,250 mi)	24,000 km (15,000 mi)	30,000 km (18,750 mi)	36,000 km (22,500 mi)	
DRIVE CHAIN	EVERY		I, L EVERY 1,000 km (600 mi)							140
BATTERY	MONTH		I	I	I	I	I	I	174	
BRAKE FLUID	MONTH I 2 YEARS *R		I	I	*R	I	I	*R	148	
BRAKE PAD WEAR			I	I	I	I	I	I	150	
BRAKE SYSTEM		I		I		I		I	148	
* BRAKE LIGHT SWITCH				I		I		I	190	
* HEADLIGHT AIM				I		I		I		
CLUTCH FLUID	MONTH I 2 YEARS *R		I	I	*R	I	I	*R	136	
CLUTCH SYSTEM				I		I		I	136	
SIDE STAND				I		I		I	154	
SUSPENSION				I		I		I	156	
* NUTS, BOLTS, FASTENERS		I		I		I		I		
** WHEELS				I		I		I		
** STEERING HEAD BEARING			I		I		I	I		

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

- NOTES: (1) Service more frequently when riding in dusty areas.
 (2) Service more frequently when riding in rain, or at fully throttle.
 (3) For higher odometer reading, repeat at the frequency interval established here.