

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓ →	ODOMETER READING [NOTE 2]							REFER TO PAGE
			1,000 km (600 mi)	6,000 km (3,750 mi)	12,000 km (7,500 mi)	18,000 km (11,250 mi)	24,000 km (15,000 mi)	30,000 km (18,750 mi)	36,000 km (22,500 mi)	
	EVERY									
DRIVE CHAIN			I, L EVERY 1,000 km (600 mi)							134
BATTERY			I	I	I	I	I	I	168	
BRAKE FLUID	2 YEARS *R		I	I	*R	I	I	*R	142	
BRAKE PAD WEAR			I	I	I	I	I	I	144	
BRAKE SYSTEM		I		I		I		I	142—146	
* BRAKE LIGHT SWITCH				I		I		I	182	
* HEADLIGHT AIM				I		I		I	80	
CLUTCH SYSTEM				I		I		I	130	
CLUTCH FLUID	2 YEARS *R		I	I	*R	I	I	*R	130	
SIDE STAND				I		I		I	150	
* SUSPENSION				I		I		I	148	
* NUT, BOLT, FASTENER		I		I		I		I		
** WHEEL				I		I		I		
** STEERING HEAD BEARING		I		I		I		I		

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

NOTE:

1. Service more frequently when riding in dusty areas.
2. For higher odometer reading, repeat at the frequency interval established here.