


To replace fuses in the right inner panel (4), remove the right side fairing (5) by removing the screw (6), remove the screw and the fuse box cover (7).

Pull the old fuse out of the clips. Push a new fuse into the clips and install the fuse box cover.


The spare fuses (8) are located in the fuse box.

**▲ WARNING**

\* **Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

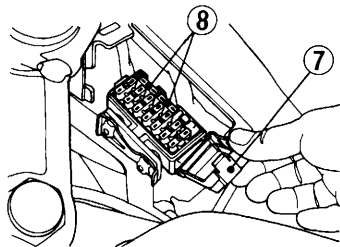

(7) Fuse box cover      (8) Spare fuses

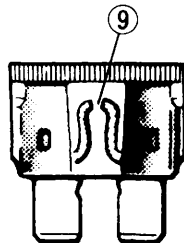

(9) Blown fuse