

ITEM	FREQUENCY	WHICHEVER →		ODOMETER READING [NOTE (1)]						REFER TO PAGE	
		COMES FIRST ↓	x 1,000 km	1	6	12	18	24	30		36
			x 1,000 mi	0.6	4	8	12	16	20		24
	NOTE	MONTH		6	12	18	24	30	36		
DRIVE CHAIN			I, L, EVERY 1,000km (600mi)						68-71		
DRIVE CHAIN SLIDER					I		I		I	72	
BRAKE FLUID	(NOTE 3)			I	I	R	I	I	R	19-22	
BRAKE PADS WEAR				I	I	I	I	I	I	81	
BRAKE SYSTEM			I		I		I		I	20-22	
* BRAKE LIGHT SWITCH					I		I		I	92	
* HEADLIGHT AIM					I		I		I	-	
CLUTCH SYSTEM					I		I		I	23-24	
CLUTCH FLUID	(NOTE 3)			I	I	R	I	I	R	22	
SIDE STAND					I		I		I	74	
* SUSPENSION					I		I		I	73	
* NUTS, BOLTS, FASTENERS			I		I		I		I	-	
** WHEELS/TYRES					I		I		I	-	
** STEERING HEAD BEARINGS			I		I		I		I	-	

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.

(2) Service more frequently when riding in dusty areas.

(3) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

(4) Switzerland and Austria type only.