

<b>(Ref.No.) Description</b>	<b>Function</b>	
(5) PGM-FI malfunction indicator lamp (MIL) (red)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at ○ (RUN).</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p>	
(6) Right turn signal indicator (green)	Flashes when the right turn signal operates.	
(7) Right multi-function display	The display includes the following functions; This display shows the initial display (page 18 ).	
	Tripmeter A and B	Shows mileage per trip (page 23 ).
	Odometer	Shows accumulated mileage (page 23 ).
	Fuel gauge	Shows approximate fuel supply available (page 20 ).
Digital clock	Shows hour and minute (page 25 ).	