




## Hazard Switch

When the hazard switch (3) is  (ON) position, both left and right turn signals start flashing.

With the ignition switch is  position, the signals continue flashing even the engine or other lights are OFF.

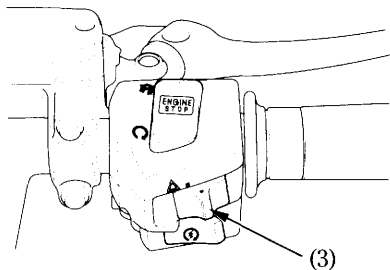

(3) Hazard switch