

(Ref.No.) Description	Function
(11) SELECT button	<p>Except E type: This button is used to select the coolant or air temperature meter or to adjust the time.</p> <p>For E type: This button is used to select the coolant or air temperature meter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter.</p>
(12) Left multi-function display	The display includes the following functions; This display shows the initial display (page 18).
Speedometer	Shows riding speed (page 23).
Coolant temperature meter	Shows coolant temperature (page 21).
Air temperature meter	Shows air temperature (page 22).