

## Fuse Box:

### **VFR**

The fuse box is located under the right inner panel.

The specified fuses are:

10A , 20A


### **VFR-ABS**

The fuse boxes are located under the right and left inner panels.


The specified fuses are:

10A , 20A , 30A

1. Remove the inner panel (page 66 ).
2. Open the fuse box cover (1).
3. Pull out the old fuse and install a new fuse.  
The spare fuses (2) are located in the fuse box.
4. Close the fuse box cover and install the inner panel.

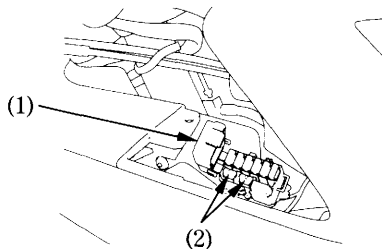

### **(VFR-ABS only)**

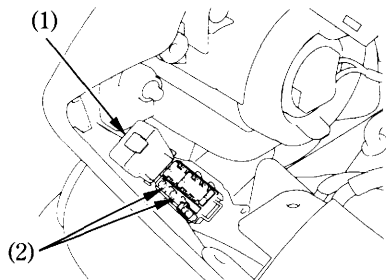

- (1) Fuse box covers  
(2) Spare fuses